



1. Load Sleeve & Collet  
Leading with Ends Marked "Top"
2. Install Barbed Fitting
3. Move Collet to the Base of the Tube
4. Lower Sleeve Over Collet to the Pre-Locked Position
5. Lock Assembly with BarbLock Tool

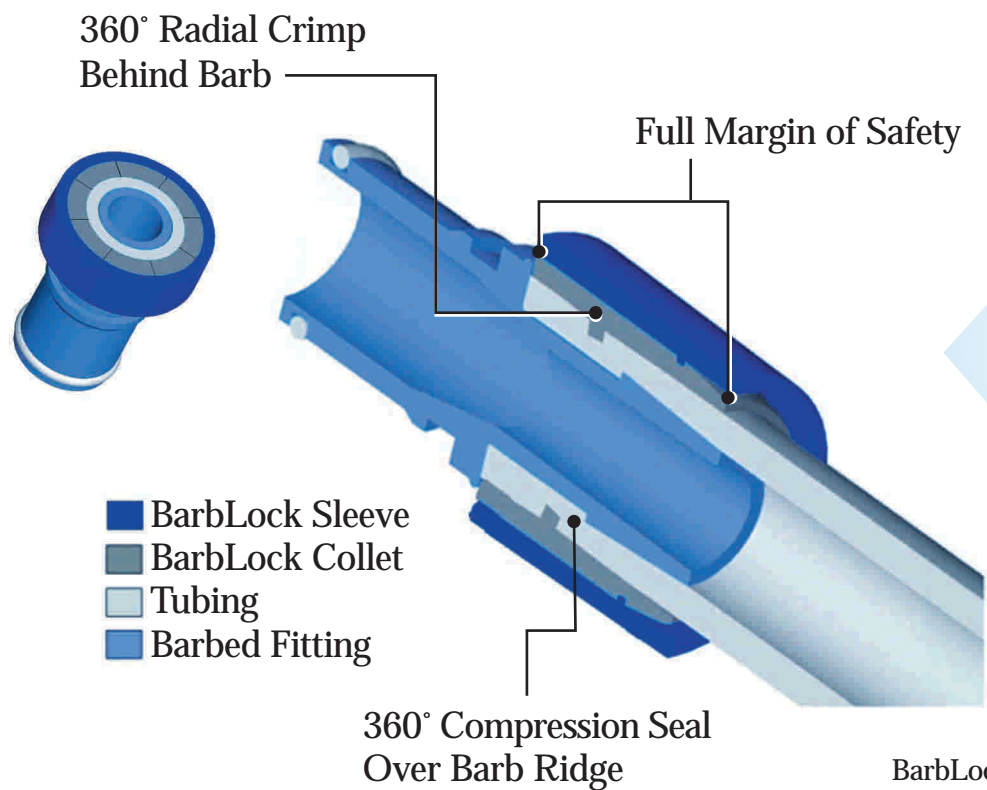

BarbLock  
vs.  
Cable Tie

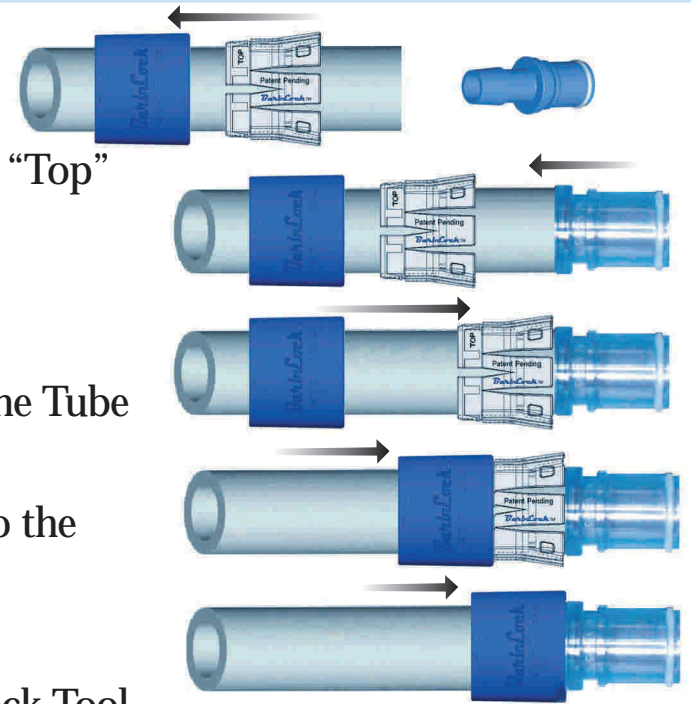